


Montageanleitung

Modellname: **TOP**

Modellreihe: **A4 SK 00 10**





Seite **1** von **9**

- ④ Aussenseite rechts
- ⑤ Unterboden
- ⑥ Oberboden
- ⑦ Konstruktionsboden
- ⑧ Rückwand
- ⑨ Glasboden
- ⑩ Glasteil Seite
- ⑪ Glastür
- ⑯ Aussenseite links
- ⑰ Tür Holzfront

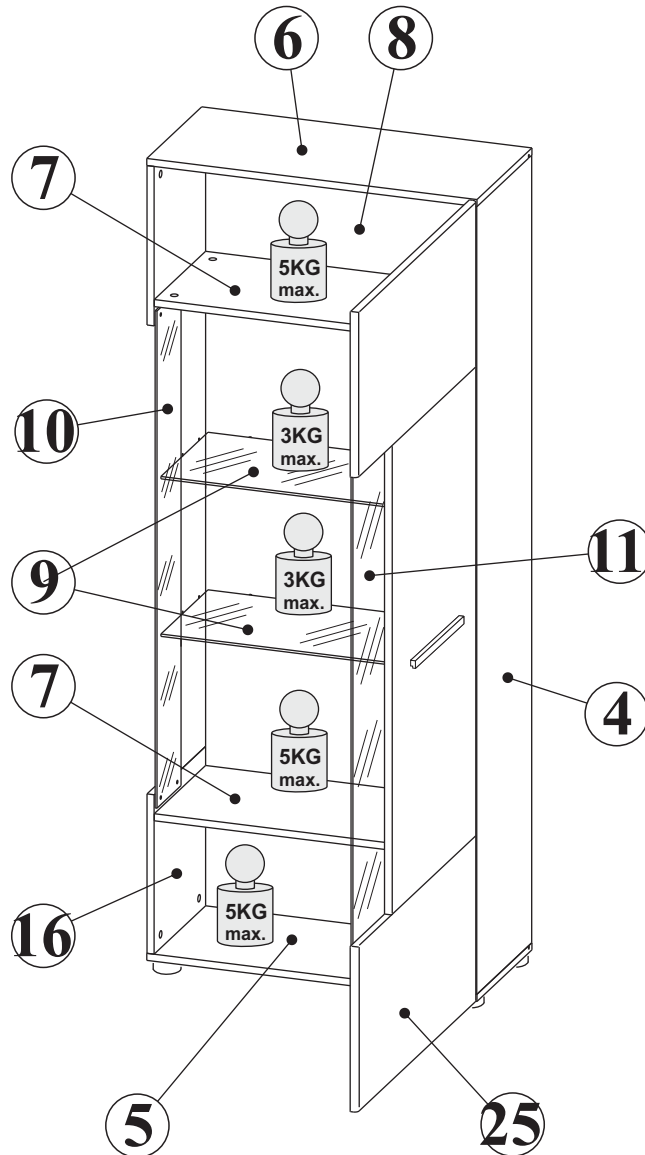










Colli 1 ⑤ ⑥ ⑦ ⑨

Colli 2 ④ ⑧ ⑩ ⑪ ⑯ ⑰


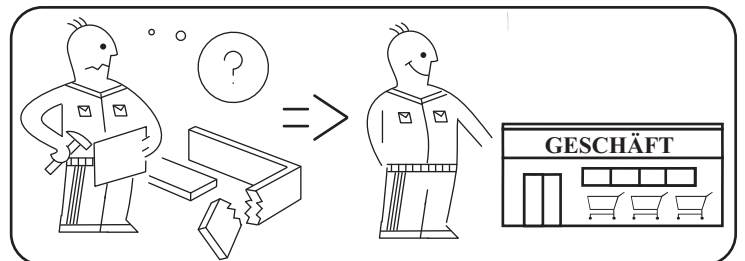
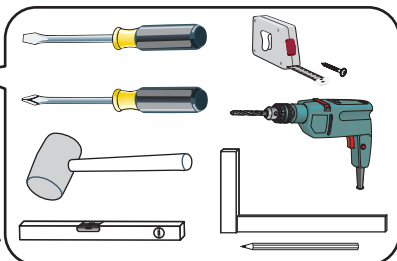
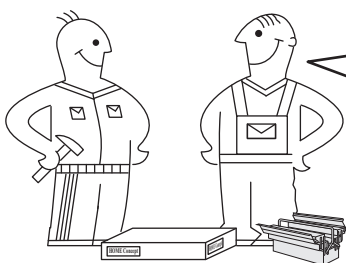
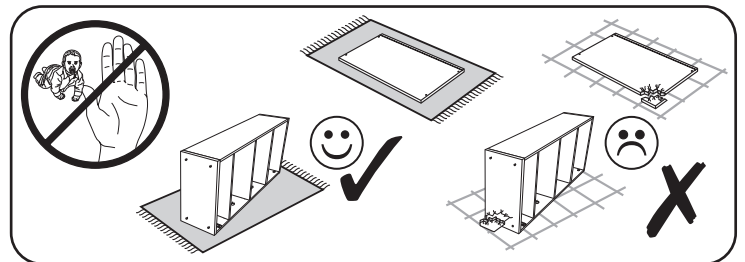







B11

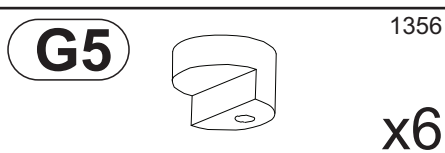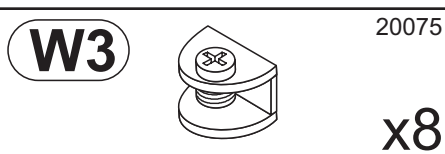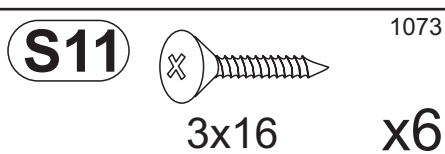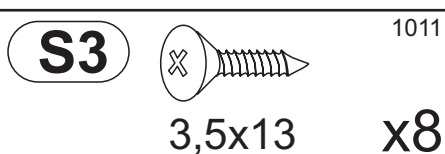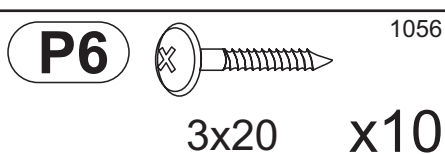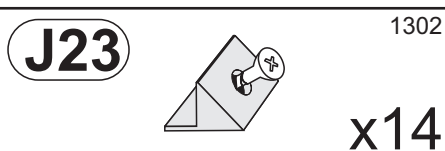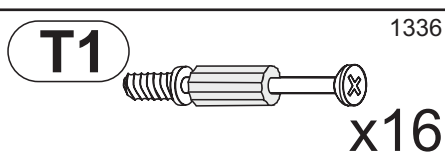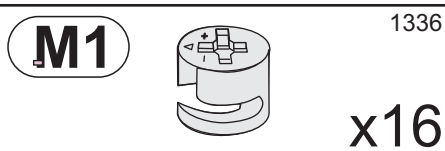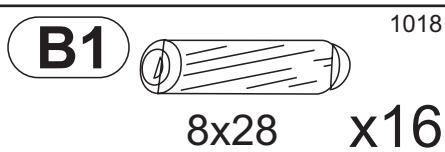



B12

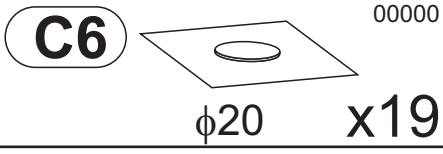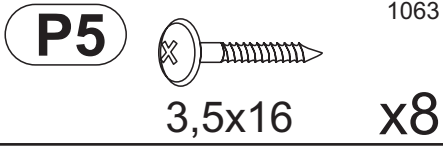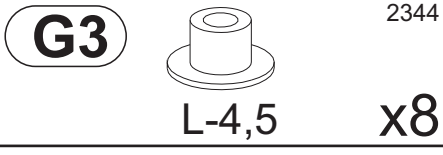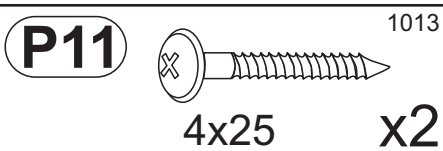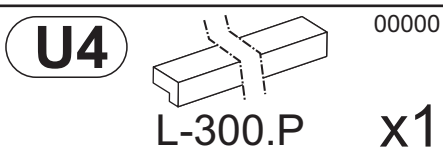




B15

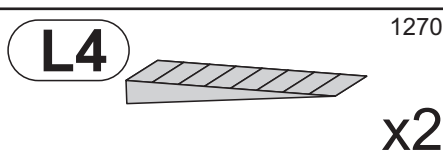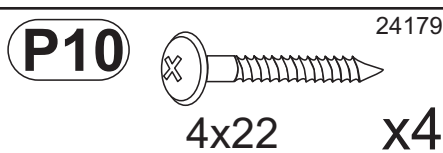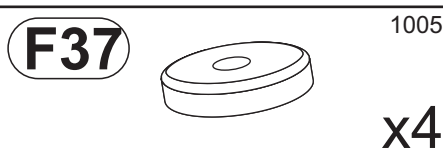

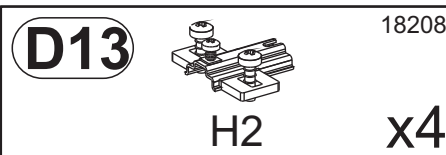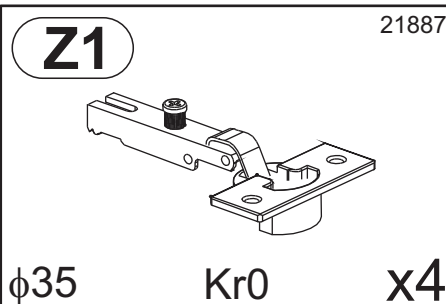

B13

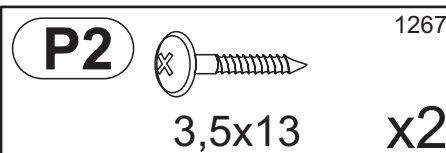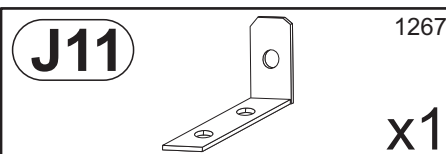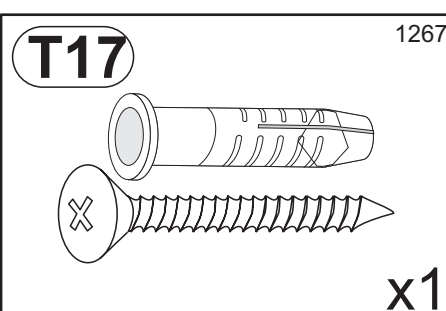



B19




G3  2344
L-4,5 x4


G5  1356
x3

P5  1063
3,5x16 x4


S11  1073
3x16 x3


W3  20075
x8


B1  1018
8x28 x8


D13  18208
H2 x4

E6  1007
ES 6x9,5 x8







M1  1336
x8









T1  1336
x8

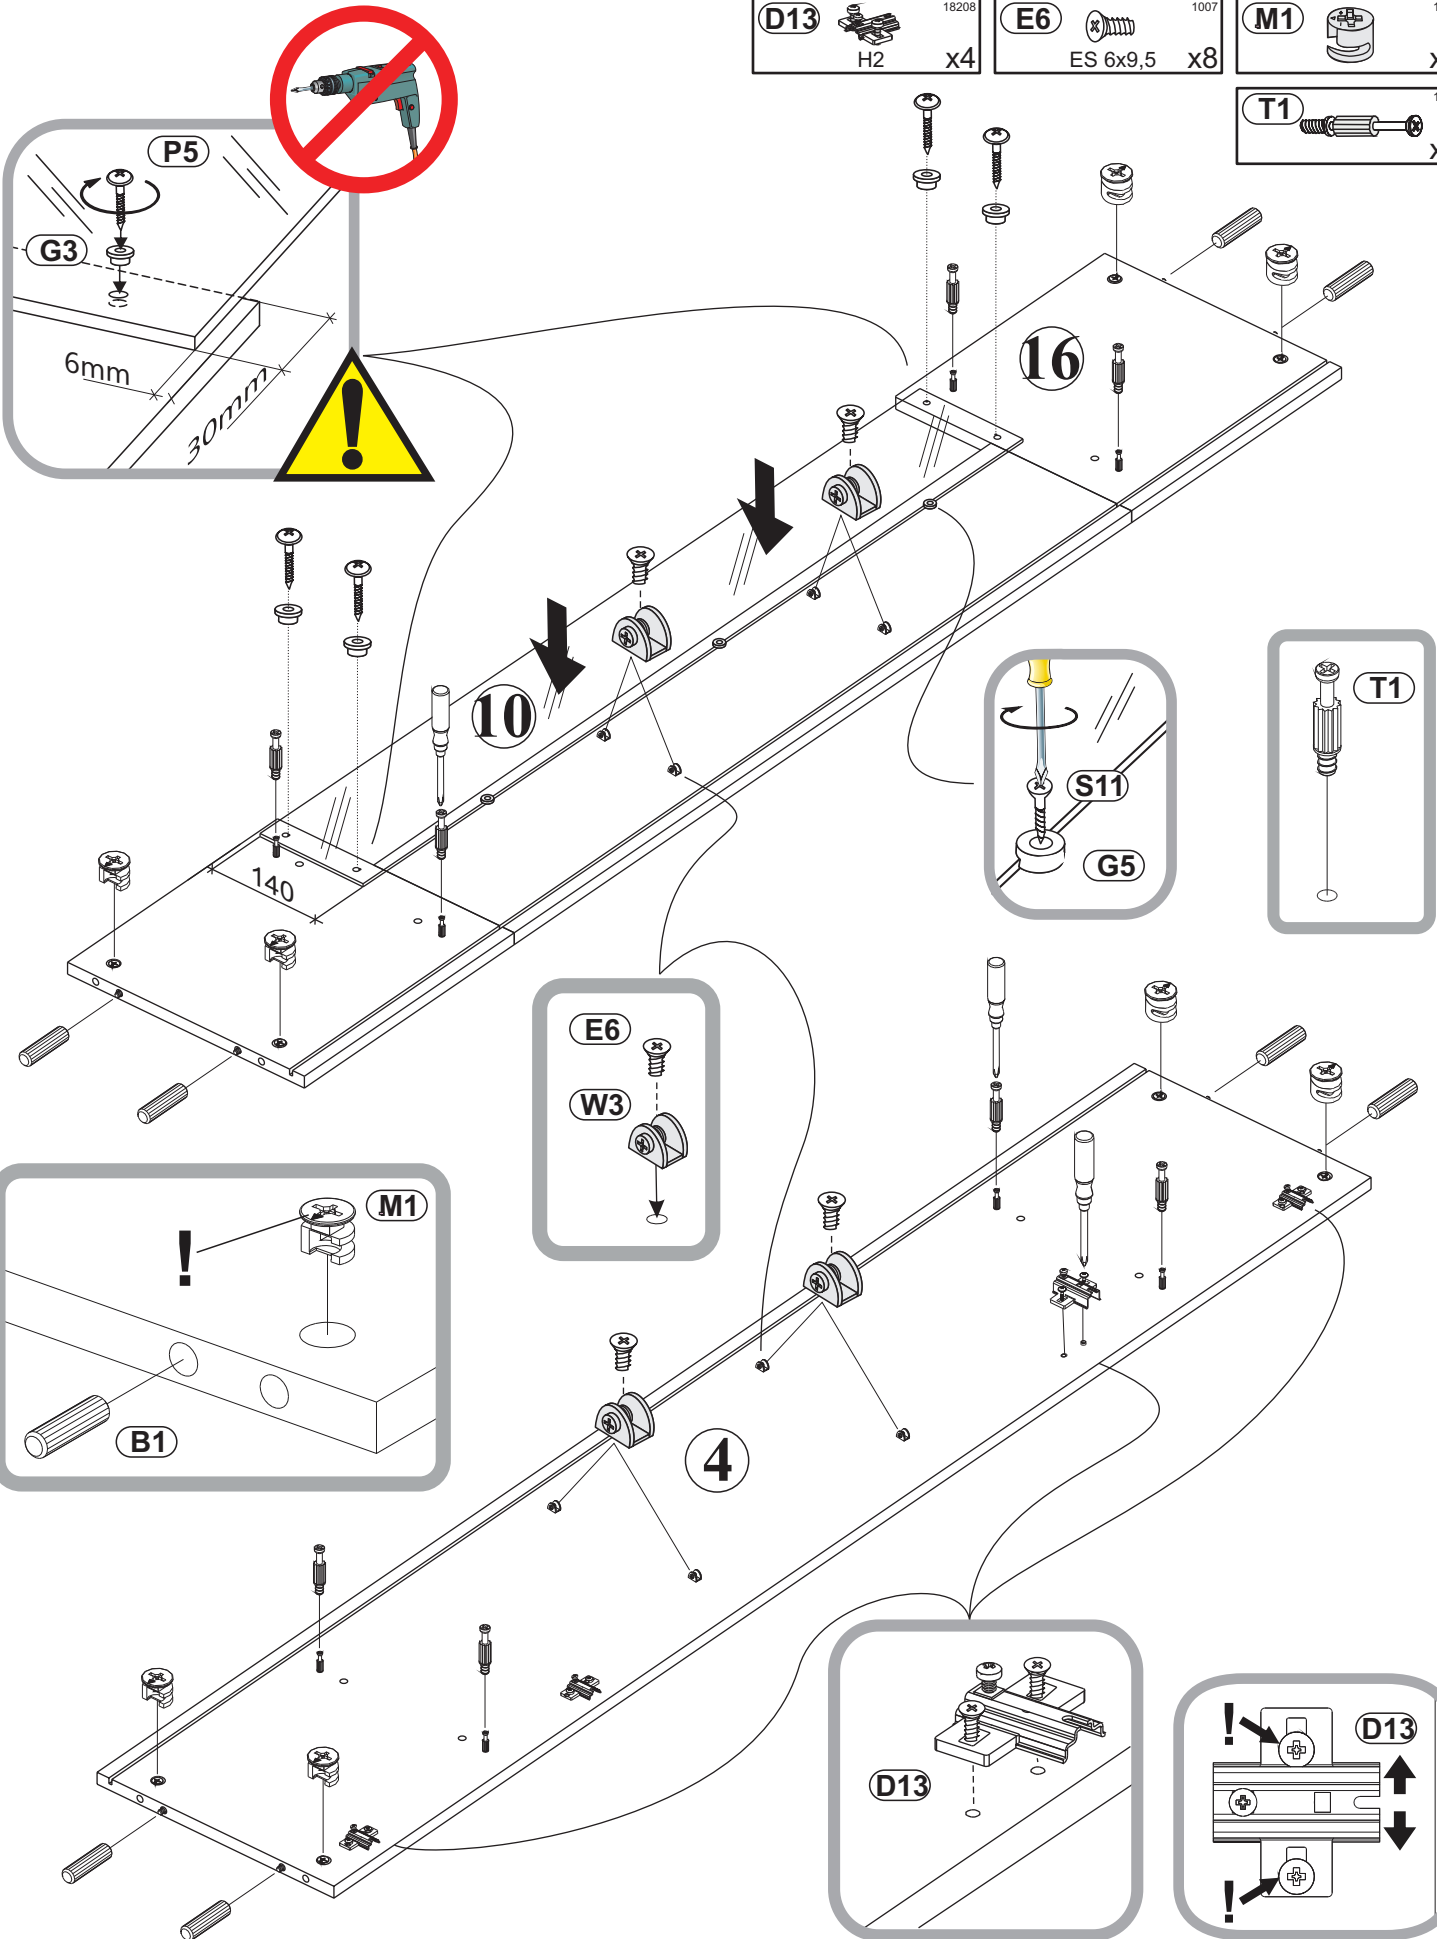

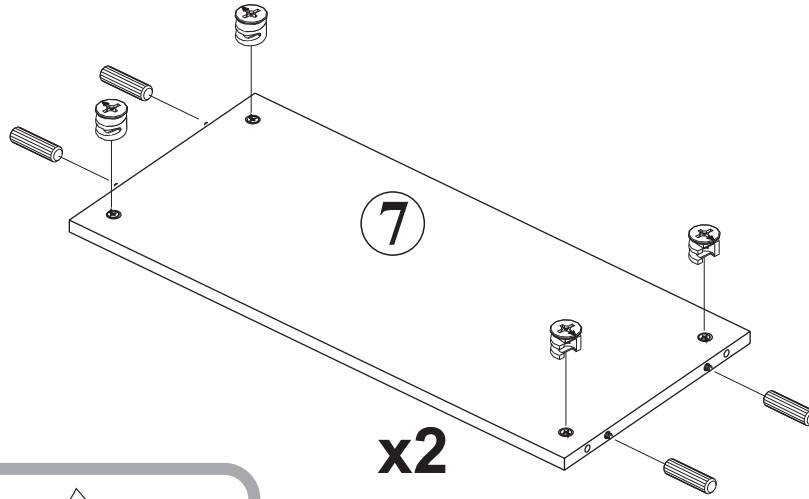


B1		1018
	8x28	x8
M1		1336
		x8
T1		1336
		x8
F37		1005
		x4
P10		24179
	4x22	x4

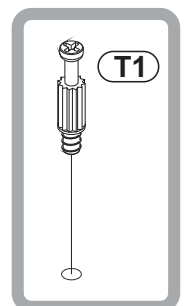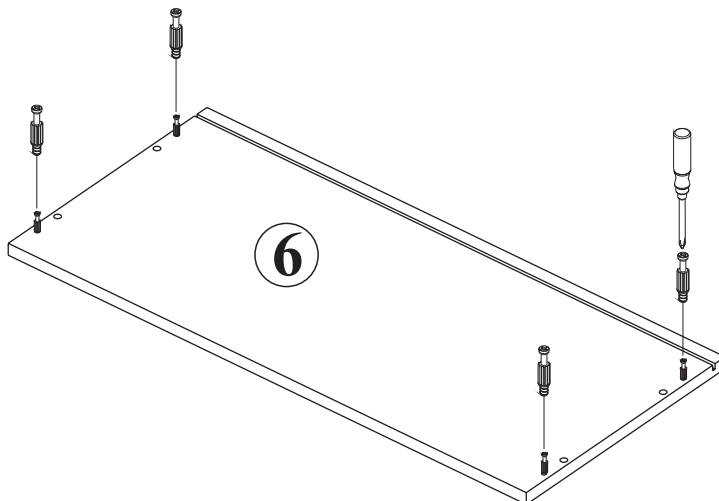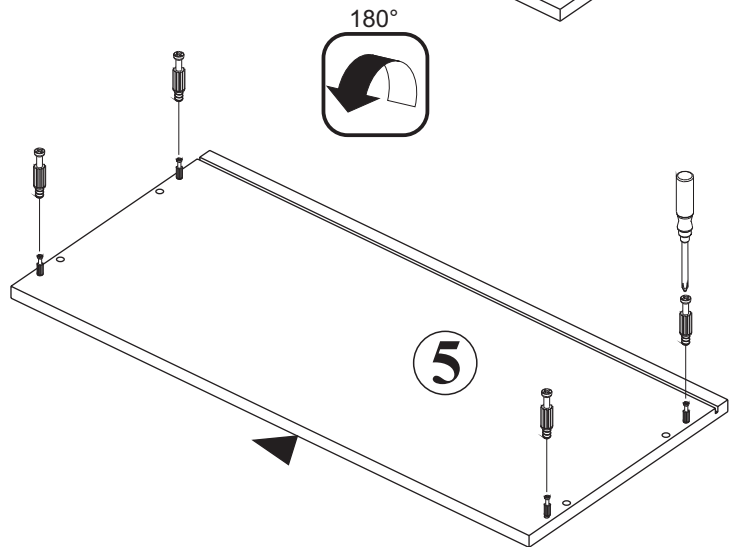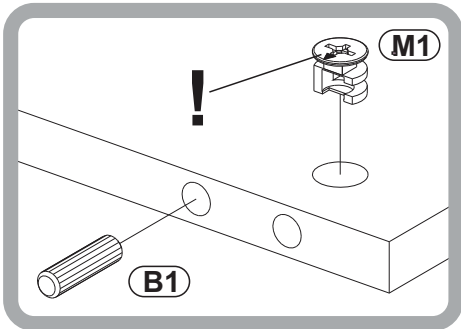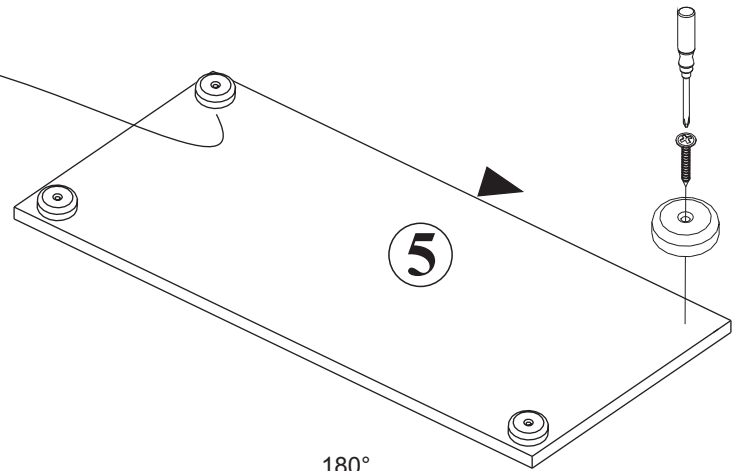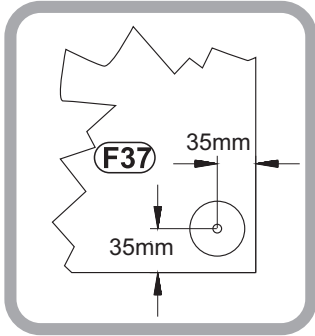


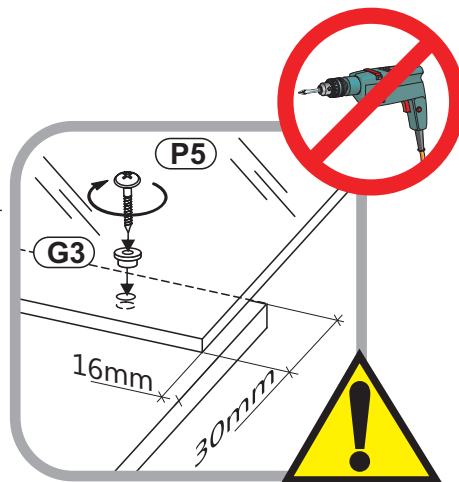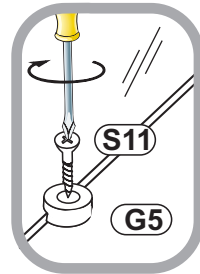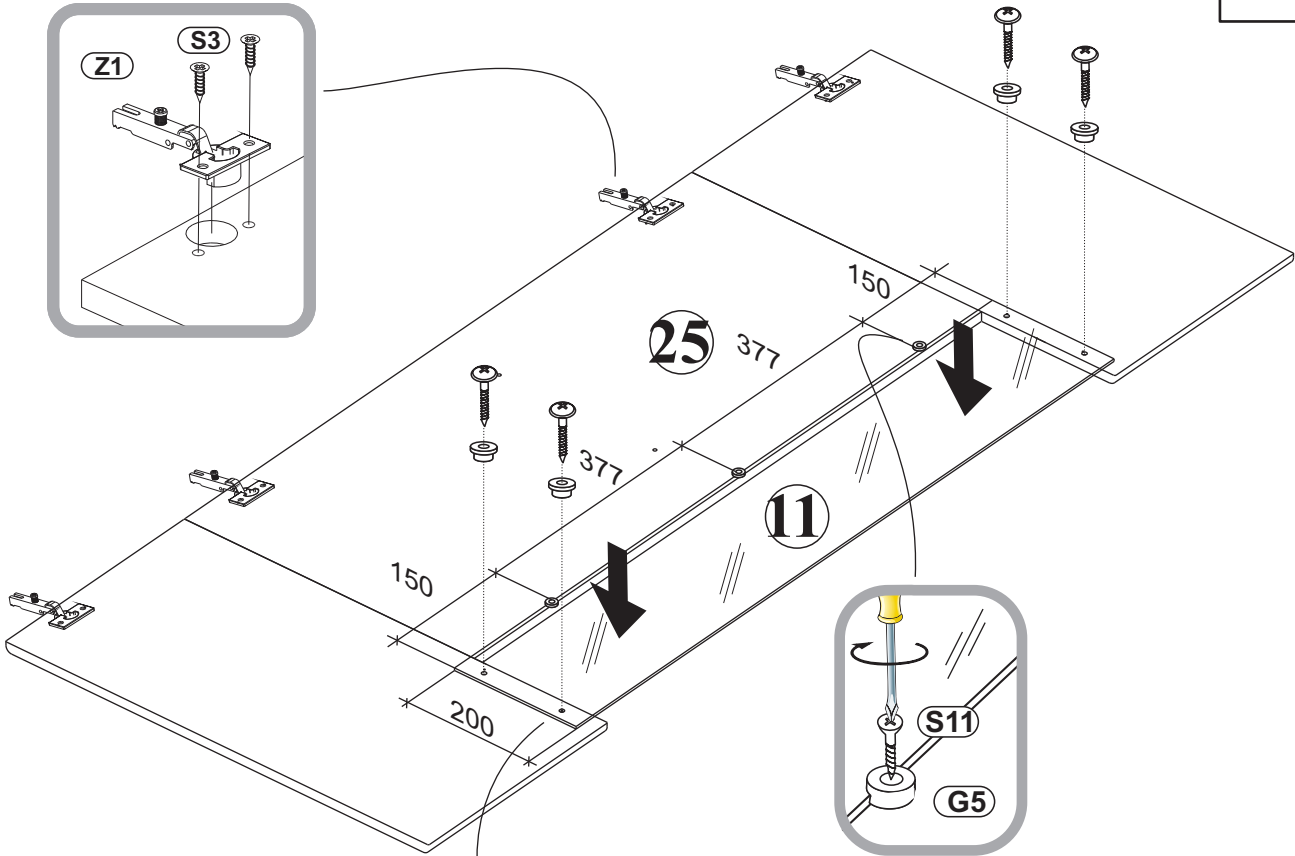


4

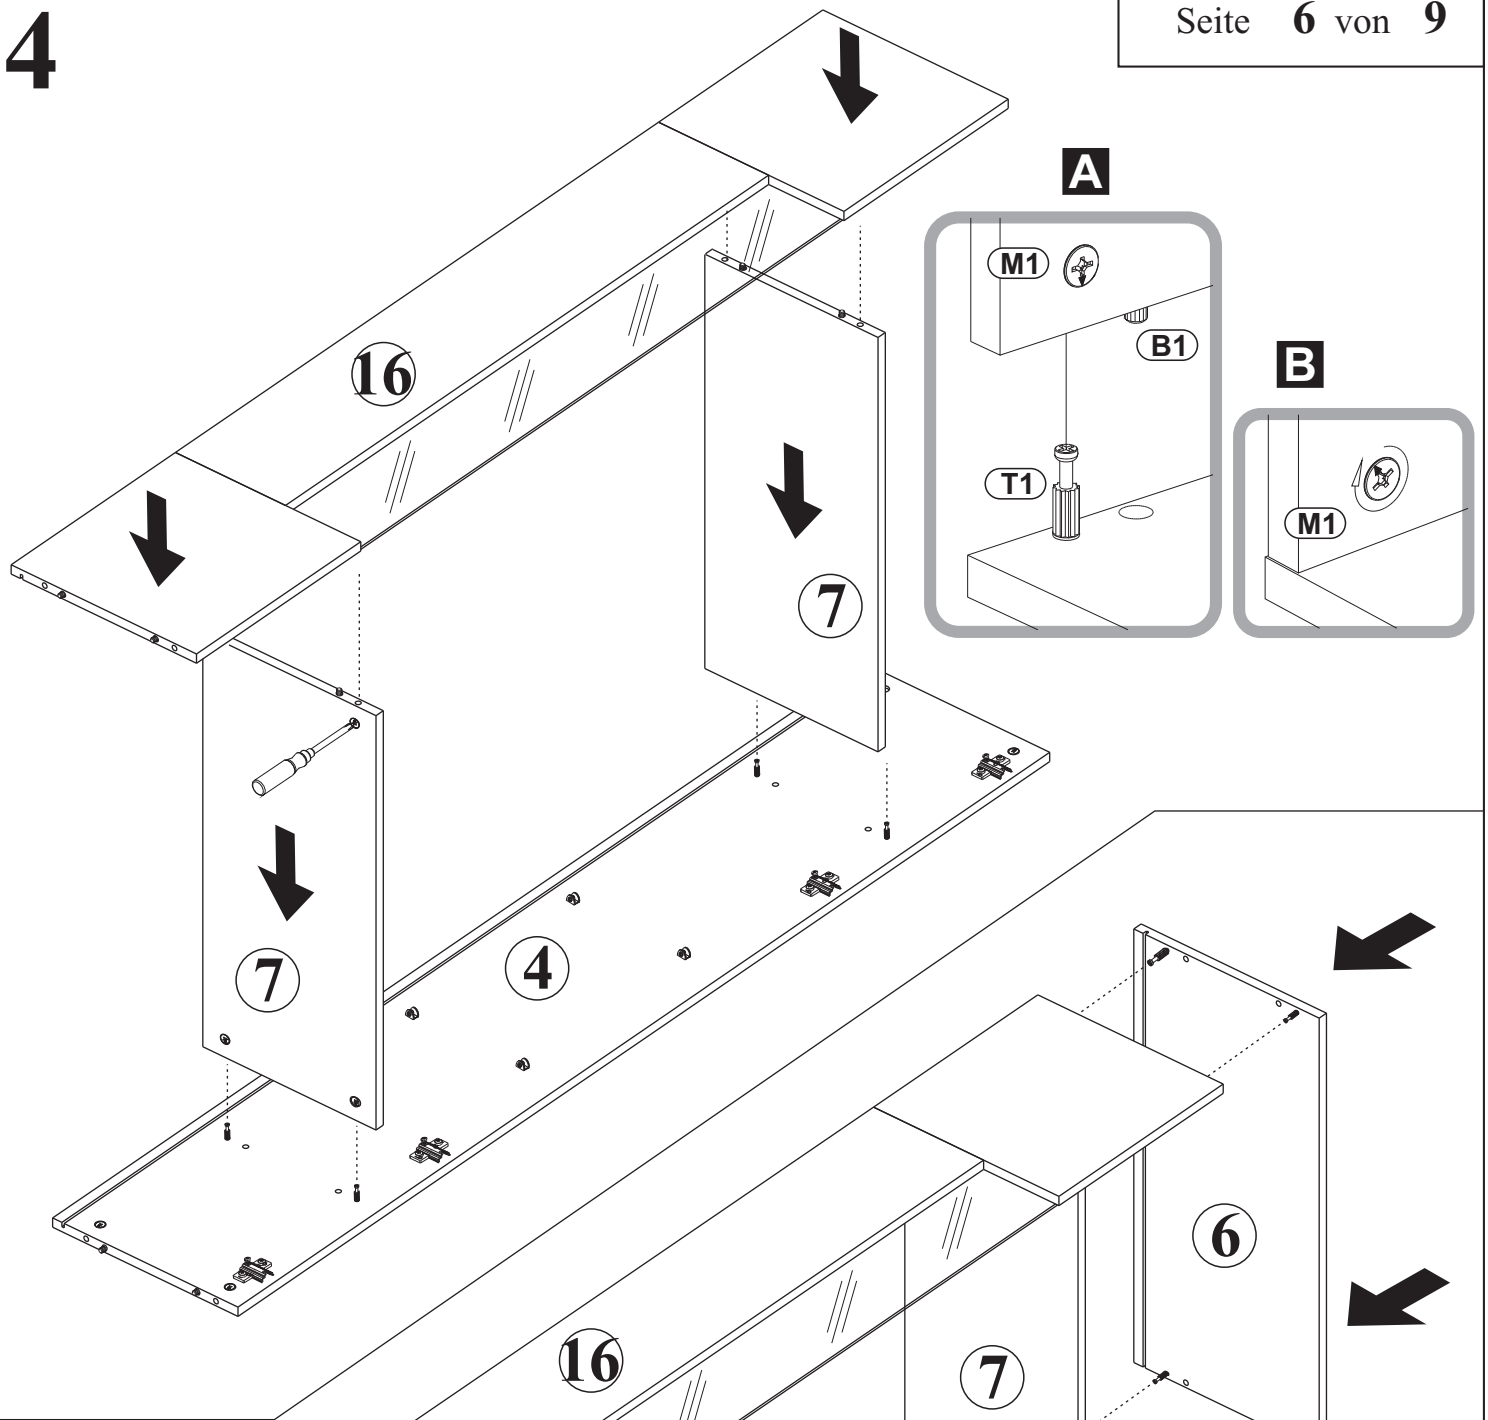


5











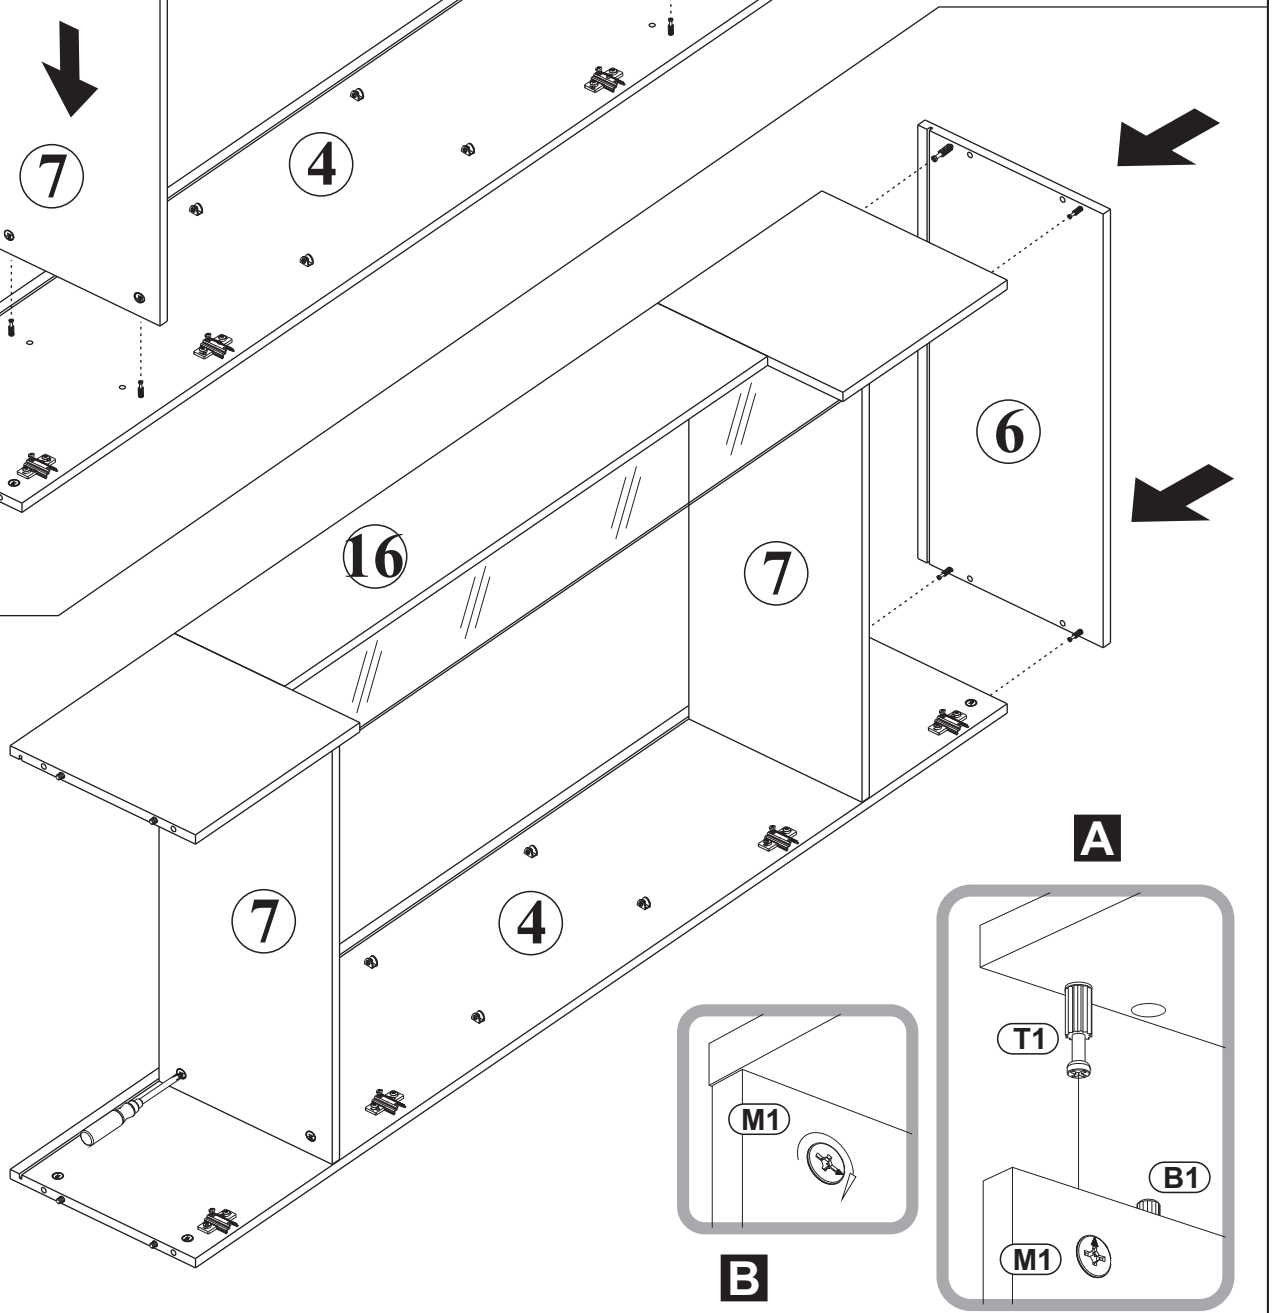







6

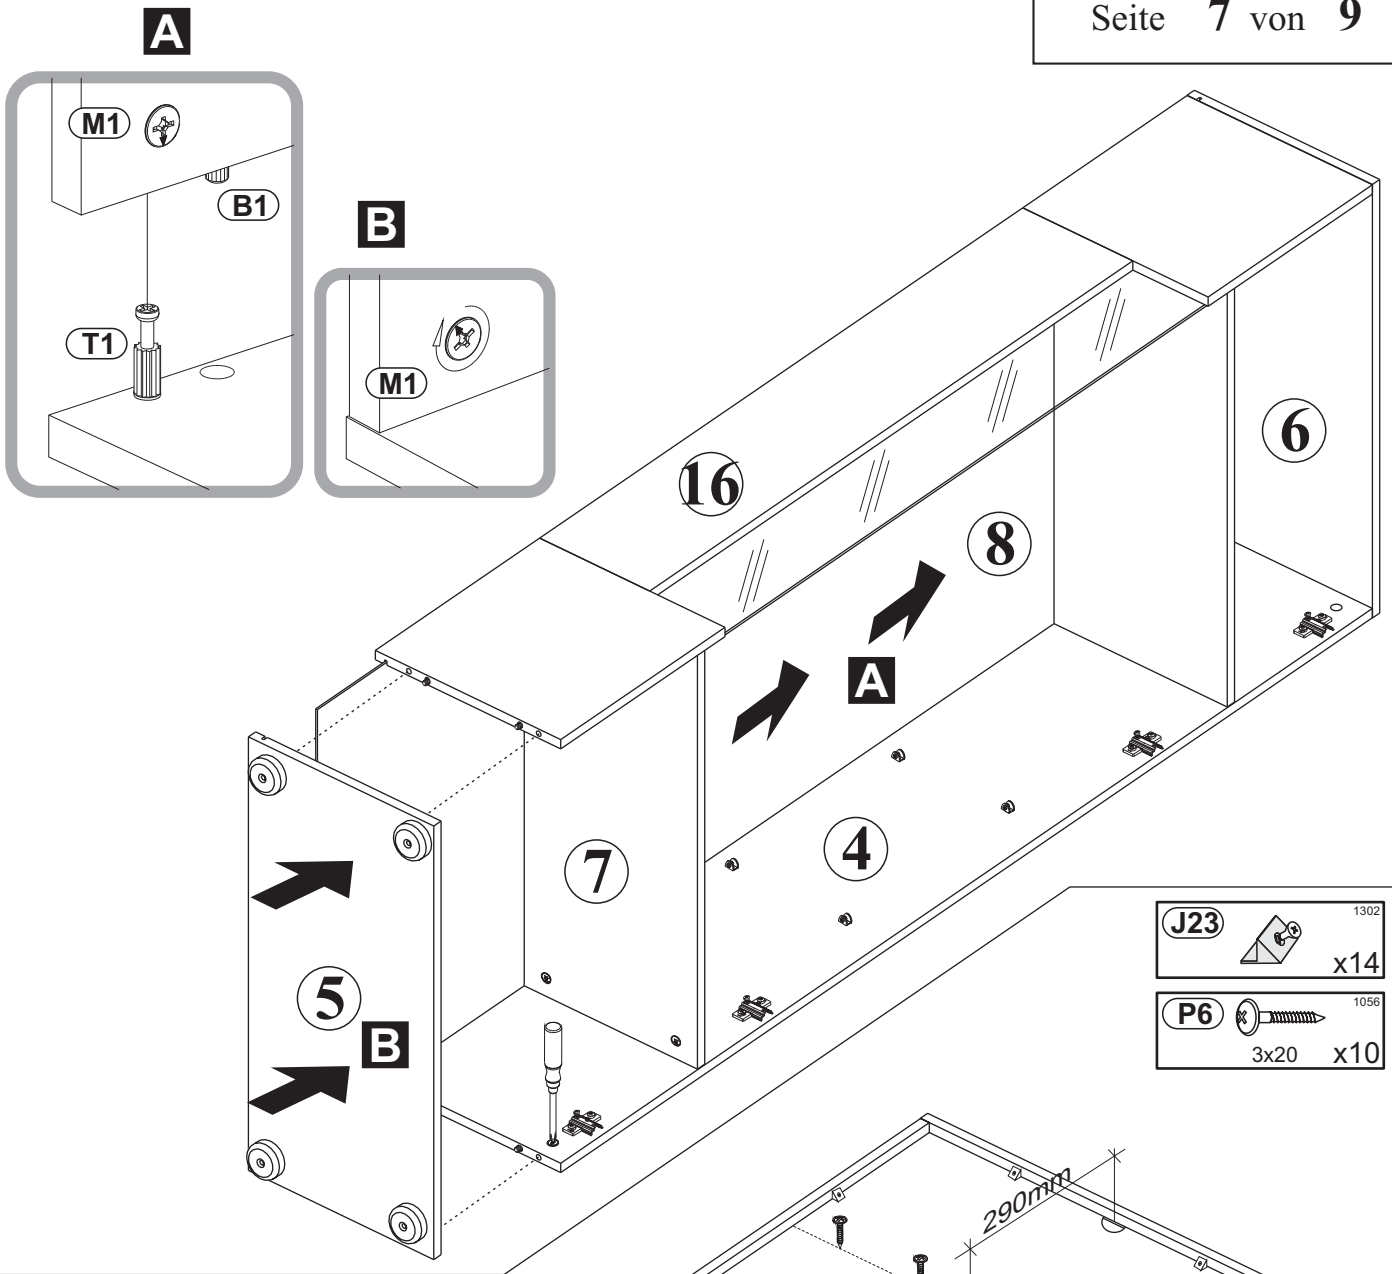


7

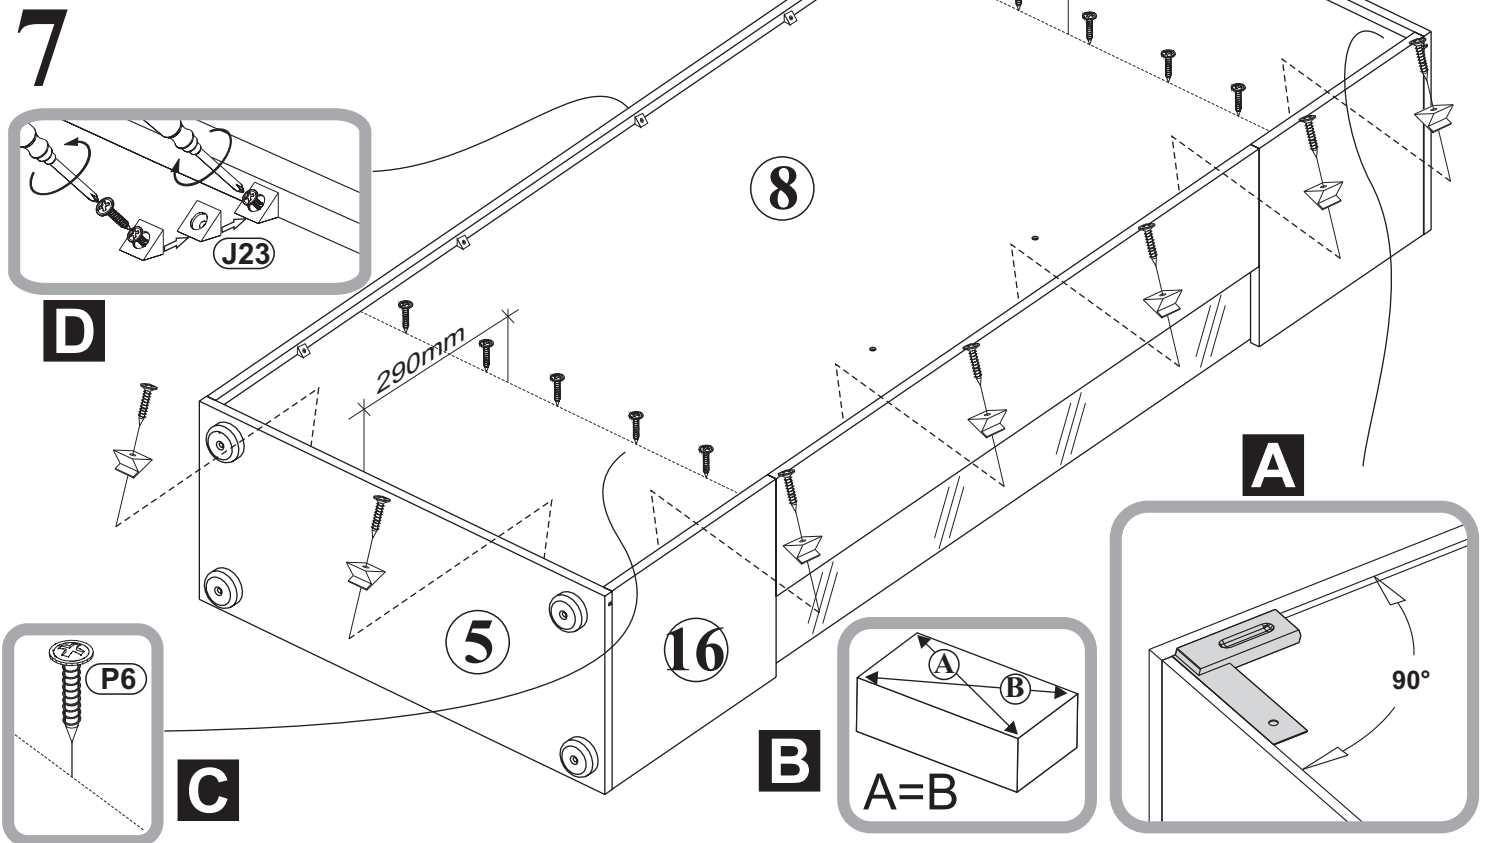

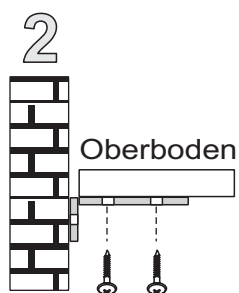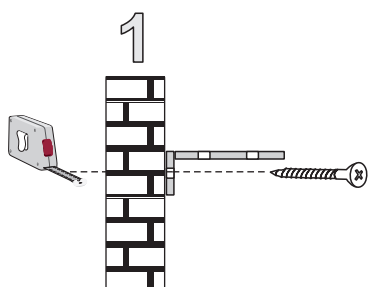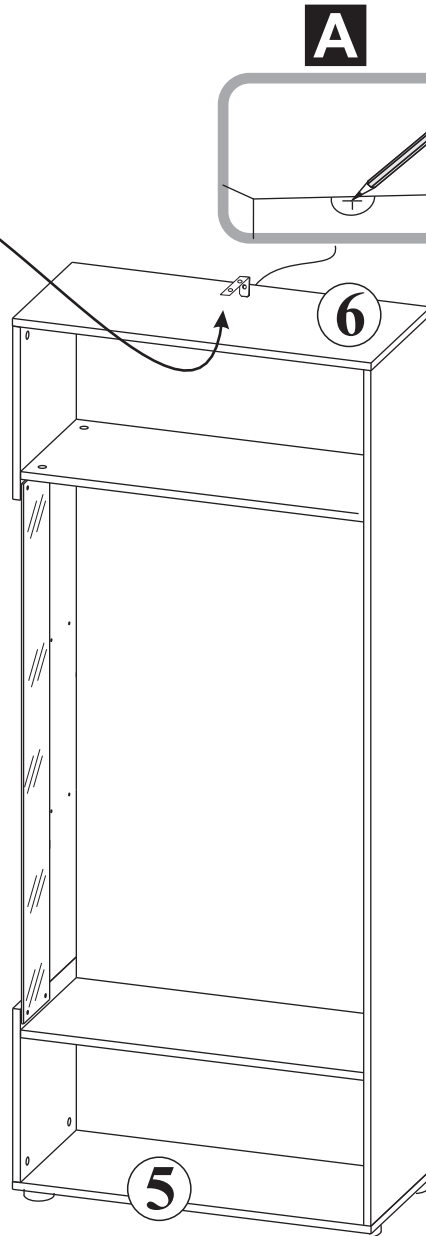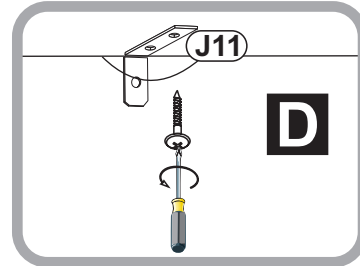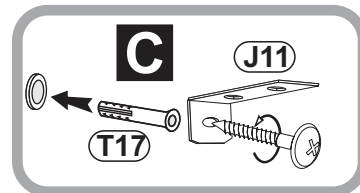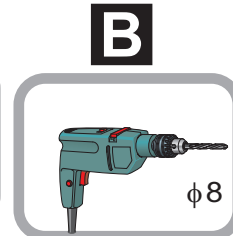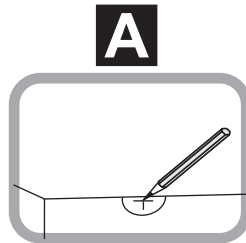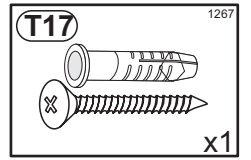
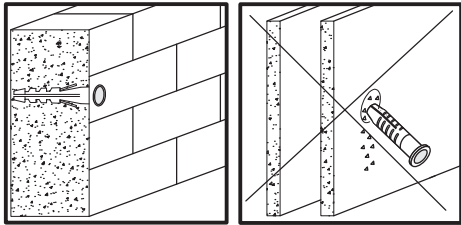


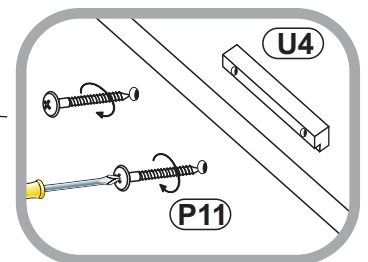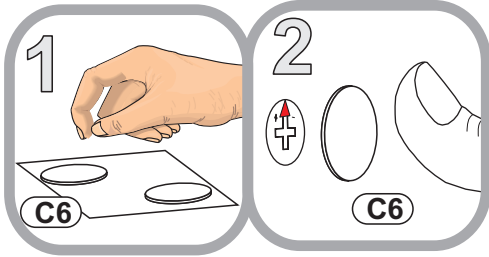

C

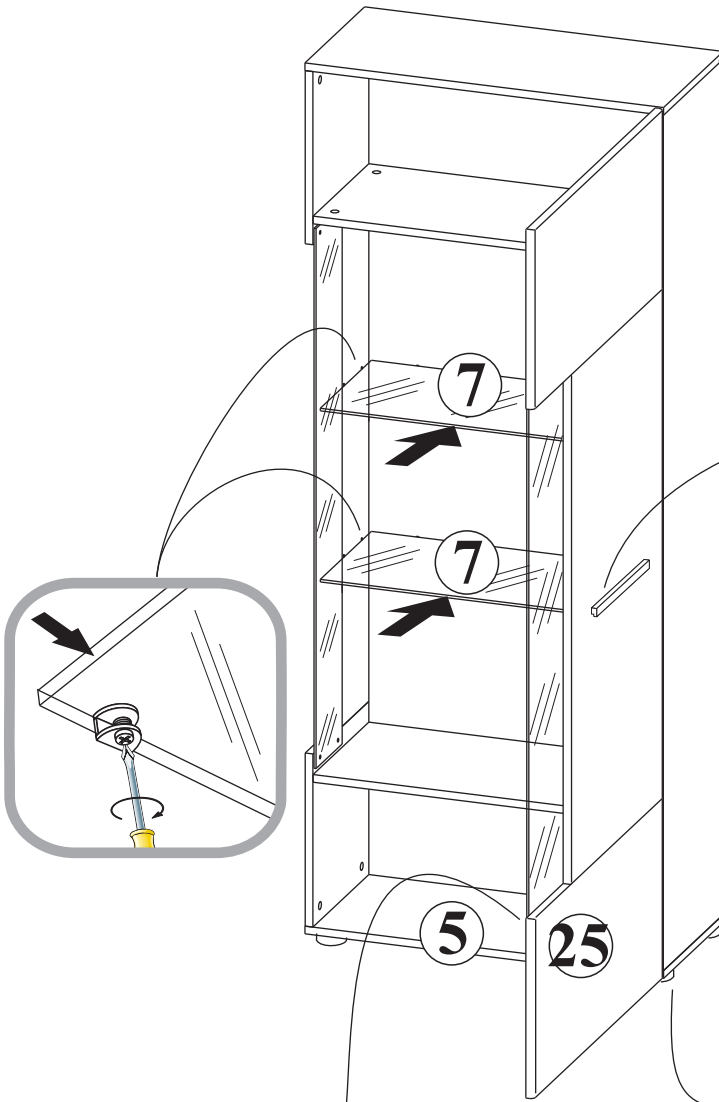


A

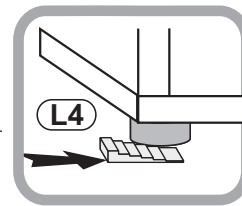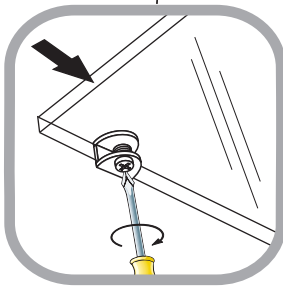

D

B

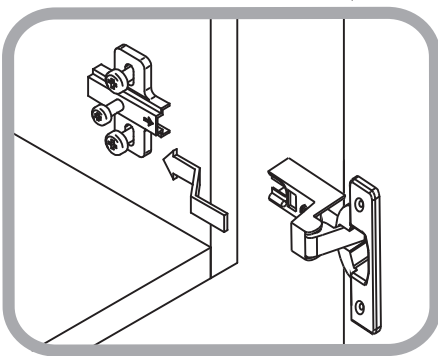

Option LED-Beleuchtung

